Livi 502 | motor release swap



 
Note All Livi 502 are set-up for install on the Left gate.

When installing two motors, one needs to be adjusted to suit the right gate.





- 1. Remove cover
- 2. Remove motor release housing.
- 3. Loosen & remove cam
- 4. Remove & flip shaft
- 5. Place cam loose on shaft
- 6. Replace shaft in housing. Attatch housingto motor.



- 8. Unbolt motor from mount bracket, and rotate motor 180°.
- 9. Bolt motor back onto mount bracket.

